

VI.5.3D-PRTMAP PROGRAM FCST HCL TECHNIQUE PRTMAP

Purpose

Technique PRTMAP sets whether Mean Areal Precipitation (MAP) values are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

PRTMAP(integer)

where integer is 1 or 0 specifying whether or not to print MAP values

Example

```
PRTMAP(1)  
PRTMAP
```

The MAP values will be printed.